



JET 6 2.8KW 1000851
JET 6 5.6KW 1000850



JET TWIN
1000855



DIMENSIONS

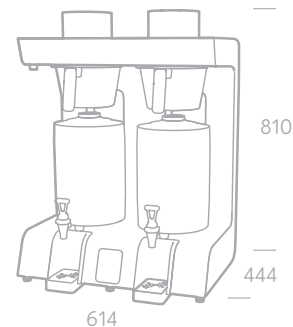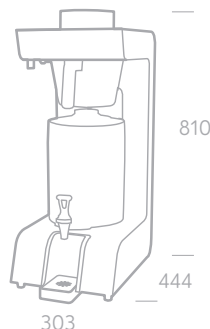

- Single (6 litre) or Twin (12 litre) options
- Pre-set recipe and volume options
- Basket safety lock during brewing

- Operator friendly and easy-to-use
- Vacuum insulated urn for energy-efficiency and temperature retention
- Two power options

ASSOCIATED PRODUCTS
(SOLD SEPARATELY)

REQUIRED

JET URN
1700204



OPTIONAL

JET GRINDER
1000891



HANDS-FREE URN
TAP ADAPTER
2100500



PRECISE,
PROGRAMMABLE
BATCH BREWER FOR
HIGHER VOLUME
REQUIREMENTS.

NAME	ORDER CODE
Hands-Free Urn Tap Adapter	2100500
Jet Filter Papers - Case of 500	8000151

ACCESSORIES

BREWERS

PRODUCT INFO	PERFORMANCE SPECS	SIZE	PLUMBING & ELECTRICAL REQS		PACKAGING		
NAME ORDER CODE	FULL BREW	DIMENSIONS (D x W x H mm)	POWER @ 230V	PLUMBING REQS	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QTY / PALLET
Jet 6 2.8kW 1000851	6L	462 x 303 x 840	2.8kW	3/4" BSP	24kg	500 x 400 x 900	6
Jet 6 5.6kW 1000850			5.6Kw				
Jet Twin 1000855	6L (per urn)	462 x 614 x 837				28kg	500 x 710 x 920


ACCESSORIES

PRODUCT INFO	SIZE	PACKAGING		
NAME ORDER CODE	DIMENSIONS (D x W x H mm)	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QTY / PALLET
Jet Grinder 1000891	370 x 188 x 559	25kg	580 x 300 x 800	12
Jet Urn 1700204	420 x 245 x 570	7kg	640 x 310 x 440	16

JET TWIN BATCH BREWER

JET TWIN

1000855

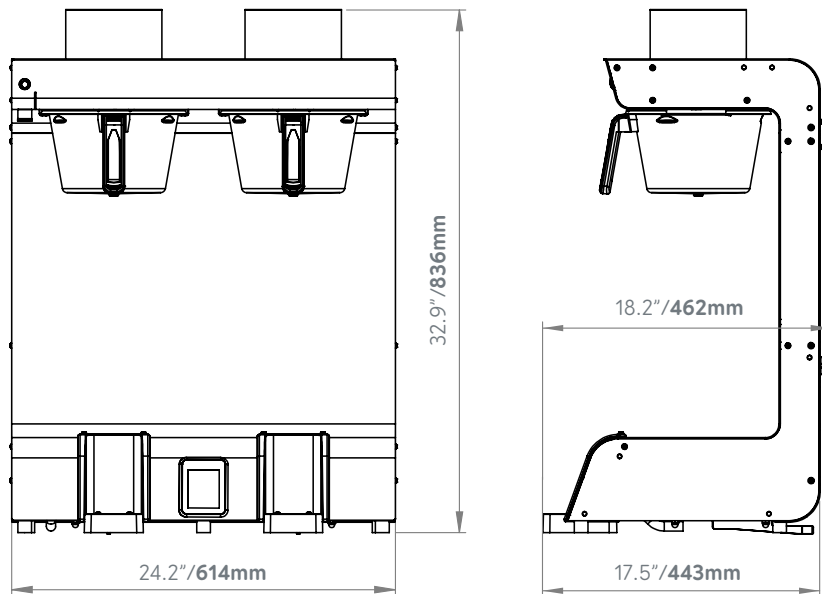

VENTILATION REQUIREMENTS

- Back: 70mm/2.7"
- Sides: 50mm/1.9"

Clearance required around machine if installed in an enclosed cabinet.

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The 5.6kw machine is supplied with a three core electrical cord and should be connected to a 30 amp dedicated socket. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 -145psi (100 -1000kPa, 0.1 - 1MPa).

- The inlet water must be potable and free of contaminants.
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through, Especially for new installations.
- Connect the hose to the inlet valve of the machine. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

OPERATING THE APPLIANCE FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on. Plug machine into an appropriate electrical supply and switch on the rocker switch under the machine. Follow the instructions on the screen.