

SP9 SINGLE 1000832	SP9 SINGLE WHITE 1000832W	SP9 TWIN 1000833	SP9 TWIN WHITE 1000833W	DIMENSIONS
				

SINGLE-SERVE UNDERCOUNTER PRECISION BREWER.

BOILERS & HEADS

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	CUPS (180ml)/ HR	HEAD DIMENSIONS (D x W x H mm)	UNDERCOUNTER BOILER DIMENSIONS (D x W x H mm)	TAP TO COUNTER (mm)	PLUMBING REQS
SP9 Single / SP9 Single White 1000832 / 1000832W	2.4kW	4L	25	191 x 131 x 420	395 x 155 x 565	230	3/4" BSP
SP9 Twin / SP9 Twin White 1000833 / 1000833W			50	191 x 131 x 420 (per head)			

PACKAGING


NAME ORDER CODE	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QTY / PALLET
SP9 Single / SP9 Single White 1000832 / 1000832W	4.5kg (head) + 14.1kg (boiler) Total: 18.6kg (2 boxes)	585 x 290 x 216 (head) 510 x 270 x 715 (boiler)	12
SP9 Twin / SP9 Twin White 1000833 / 1000833W	4.5kg (per head) + 14.1kg (boiler) Total: 23kg (3 boxes)	585 x 290 x 216 (head x2) 510 x 270 x 715 (boiler)	

GOOD TO KNOW


SP9 Single / SP9 Single White (1000832 / 1000832W) is packed and shipped in two boxes,
 SP9 Twin / SP9 Twin White (1000833 / 1000833W) is packed and shipped in three boxes.

SP9 SINGLE-SERVE PRECISION BREWER

COUNTER CUT-OUT

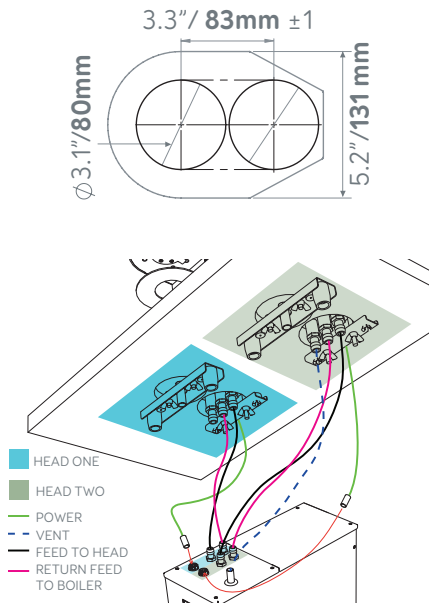

SP9 SINGLE 1000832
SP9 TWIN 1000833

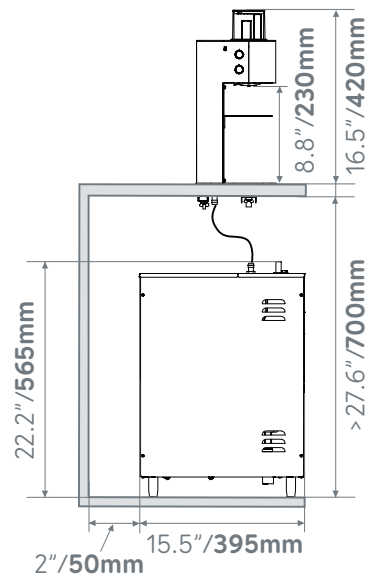

VENTILATION REQUIREMENTS

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.

- Turn on water and check for leaks.
- The SP9 Head has a drip tray attached with a drain outlet which should be plumbed to waste.

OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure the water valve is on.
- Plug in the SP9 Boiler to an appropriate electrical supply and press the power button on the front of the machine.
- The light will glow green and the machine will fill to a safe level, above the elements, before heating.
- The "Ready/Status" light will cycle two red flashes while the machine is filling to the safe level.
- Whilst the machine is above the safe level and filling, the "Ready/Status" light will remain blank.
- The "Ready/Status" light will glow green when the machine is both full and up to normal operating temperature.
- The SP9 Boiler takes 15 minutes to heat up initially.
- The SP9 Boiler is now ready for use.

NOTE: Because the machine is electronically controlled no priming is necessary.